

Highlights

- Enables short process times, flat surfaces and superior edge sharpness
- Allows high material removal rates and excellent surface qualities
- Prevents corrosion

Resin-bond diamond grinding pad

APOLLO-S

APOLLO-S is a self-sharpening, flexible diamond grinding pad for flat- and fine grinding applications, replacing traditional SiC paper pad in grinding of various materials. Precision graded diamond and optimized grit concentration lead to short process times, flat surfaces and superior edge sharpness.

Product specifications

Diameter	200 / 250 / 300 / 350 / 400 mm one-piece
	for bigger diameters multi-piece (up to 760 mm)
Diamond size	125 µm / 75 µm / 54 µm / 18 µm
Bond type	plastic
Mounting	Stainless steel plate with special grip surface / flexi-
	ble adhesive backina

Application recommendations May speed 15 n

wax speed	. 10111/5
Grinding pressure	. 5 – 7 N/cm² for steel and comparable materials
	13 N/cm² for ceramics
Coolant	water
Typical applications	rough and fine grinding of non-metallic samples,
	embedded and non embedded samples

Self-sharpening

The APOLLO-S diamond grinding pads do not have to be dressed thanks to the self-sharpening effect. This prolongs the service life, minimizes costs and increases reproducibility.


All information is non-binding and provided for information purposes only. Subject to change without notice. - APOLLO_datasheet_de-en-jp_2023-08-08 - 04.01

Grit size
54 Mikron
54 Mikron
54 Mikron
54 Mikron
18 Mikron
18 Mikron
18 Mikron
18 Mikron
18 Mikron

PUREON



Metal-bonded diamond grinding pad PLATO

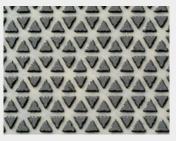

Close-up grinding Pad PLATO



Pureon offers a wide range of customized solutions. More information can be found on www.pureon.com/products/overview

Precision size range

Due to the narrow grain size spread, the number of particles with the same size is maximized, or fine and big grain fraction is reduced. This allows high material removal rates and excellent surface qualities.

Flexible backing

The flexible backing absorbs vibrations and reduces material fracturing, at the same time corrosion is prevented.

Usage indicator

The surface of the diamond grinding pad turns white to indicate end of life.

Clean work

For cooling only running water is required. The pellets can be cleaned with a brush (without the addition of acid) under running water.

Order information

Order code	APOLLO-S diamond grinding pad;
	200 mm; 125 micron; self-adhesive (PSA)
Packing	1 piece / box
Diameter	
	$D d \left(\bigcirc \right)$

Custom-engineered pads are available on request.

Examples

Diameter	Grit size	Diameter
200 mm	125 Mikron	200 mm
250 mm	125 Mikron	250 mm
300 mm	125 Mikron	300 mm
350 mm	125 Mikron	350 mm
400 mm	125 Mikron	400 mm
200 mm	75 Mikron	200 mm
250 mm	75 Mikron	250 mm
300 mm	75 Mikron	300 mm
350 mm	75 Mikron	350 mm
400 mm	75 Mikron	400 mm

Larger diameters on request.

Contact

Pureon

sales@pureon.com www.pureon.com/sales-contacts